

INSTRUCTIONS FOR MINI TRANSMITTER

IF YOU WILL BE USING A MINI TRANSMITTER (Figure A)

The Mini Transmitter will operate the same as the Single Entry Transmitter.

Important : set the code on your Mini Transmitter to match your existing transmitter(s) exactly or it will not function.

1. Remove the Transmitter Cover

Remove the screw from the back of the Mini transmitter with a small Philips screwdriver. Lay the transmitter down with the button facing up. Unsnap the top of the transmitter to access the coding switches.

Figure A



2. Set the Coding Switches

There are 10 dip switches on your transmitter, each of which can be placed in two different positions (ON,OFF). **DO NOT** set all switches in same position, such as all ON, or all OFF (Figure B). **WARNING** : No other adjustment should be made inside the transmitter. Now that your personal code, replace the transmitter cover.

Figure B



Replace the transmitter cover and tighten the Philips screw.

NOTE: If the red light on the transmitter is dim or flickers when the transmitter button is pushed, the transmitter battery may be weak.

Replace when necessary with 12 Volt Battery.

OMM2191K1

US